



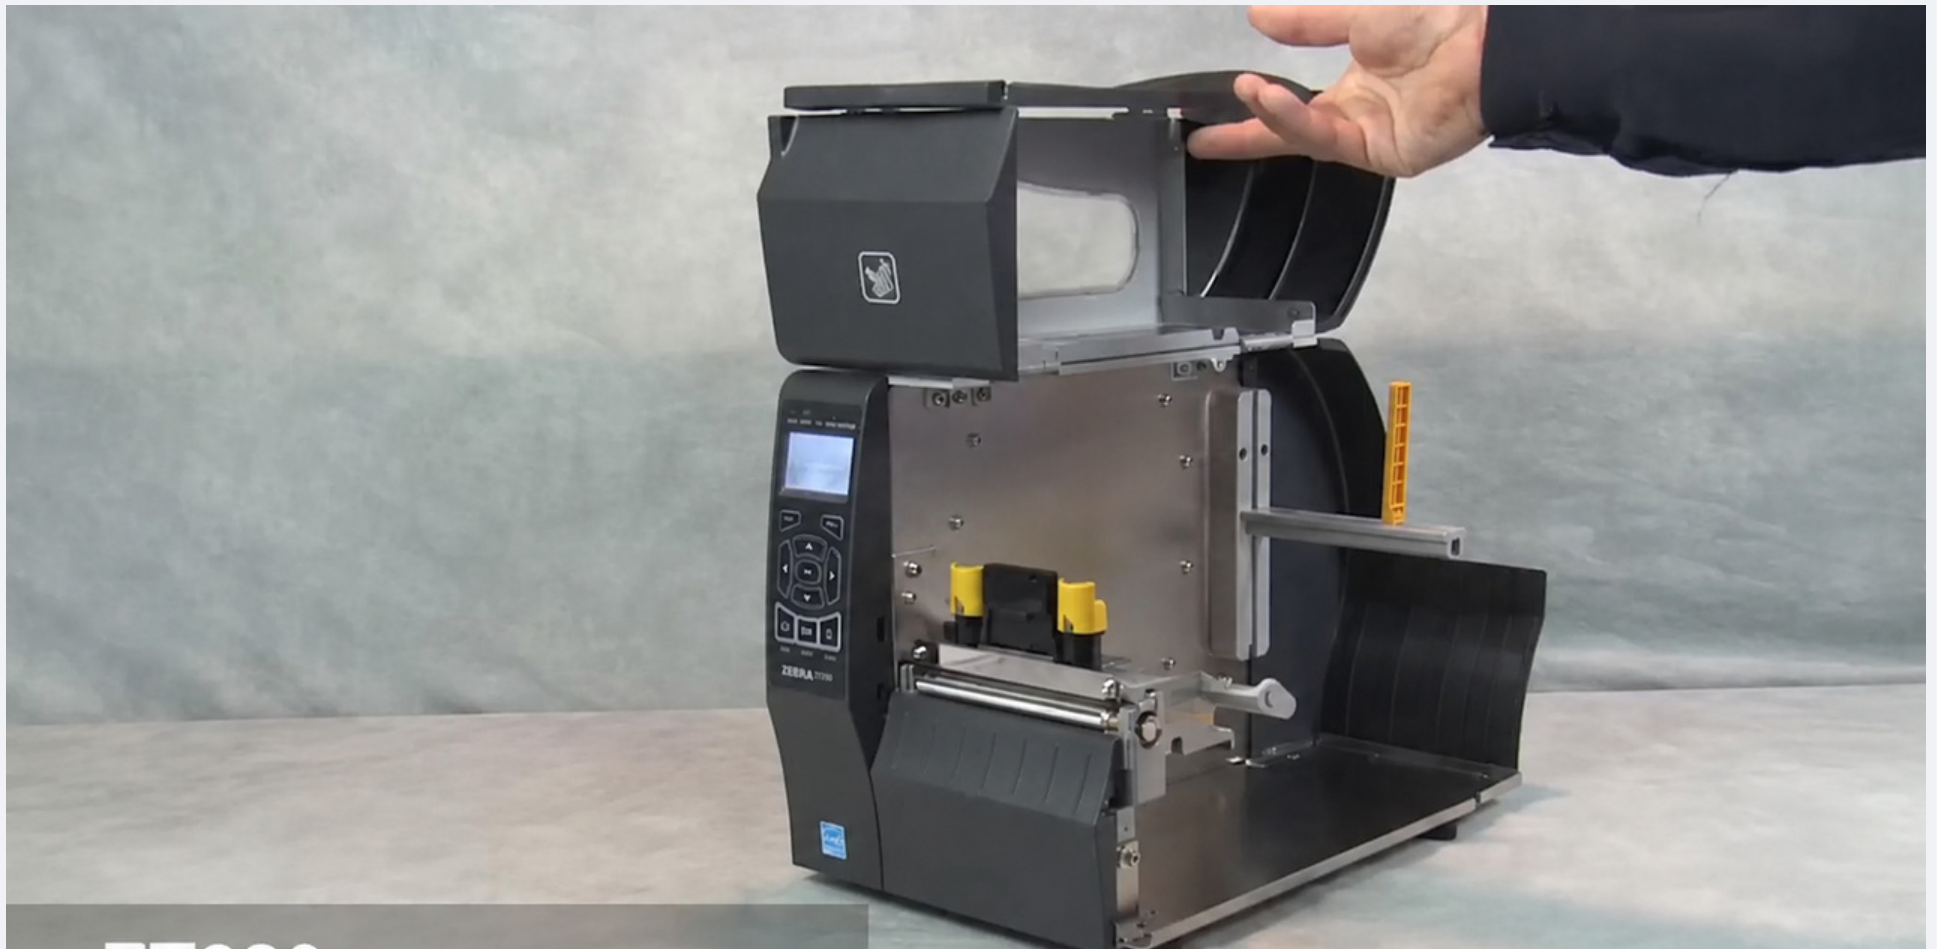

STEP 01 Open the printer's media door.

ZT230 DIRECT-THERMAL LABEL LOADING

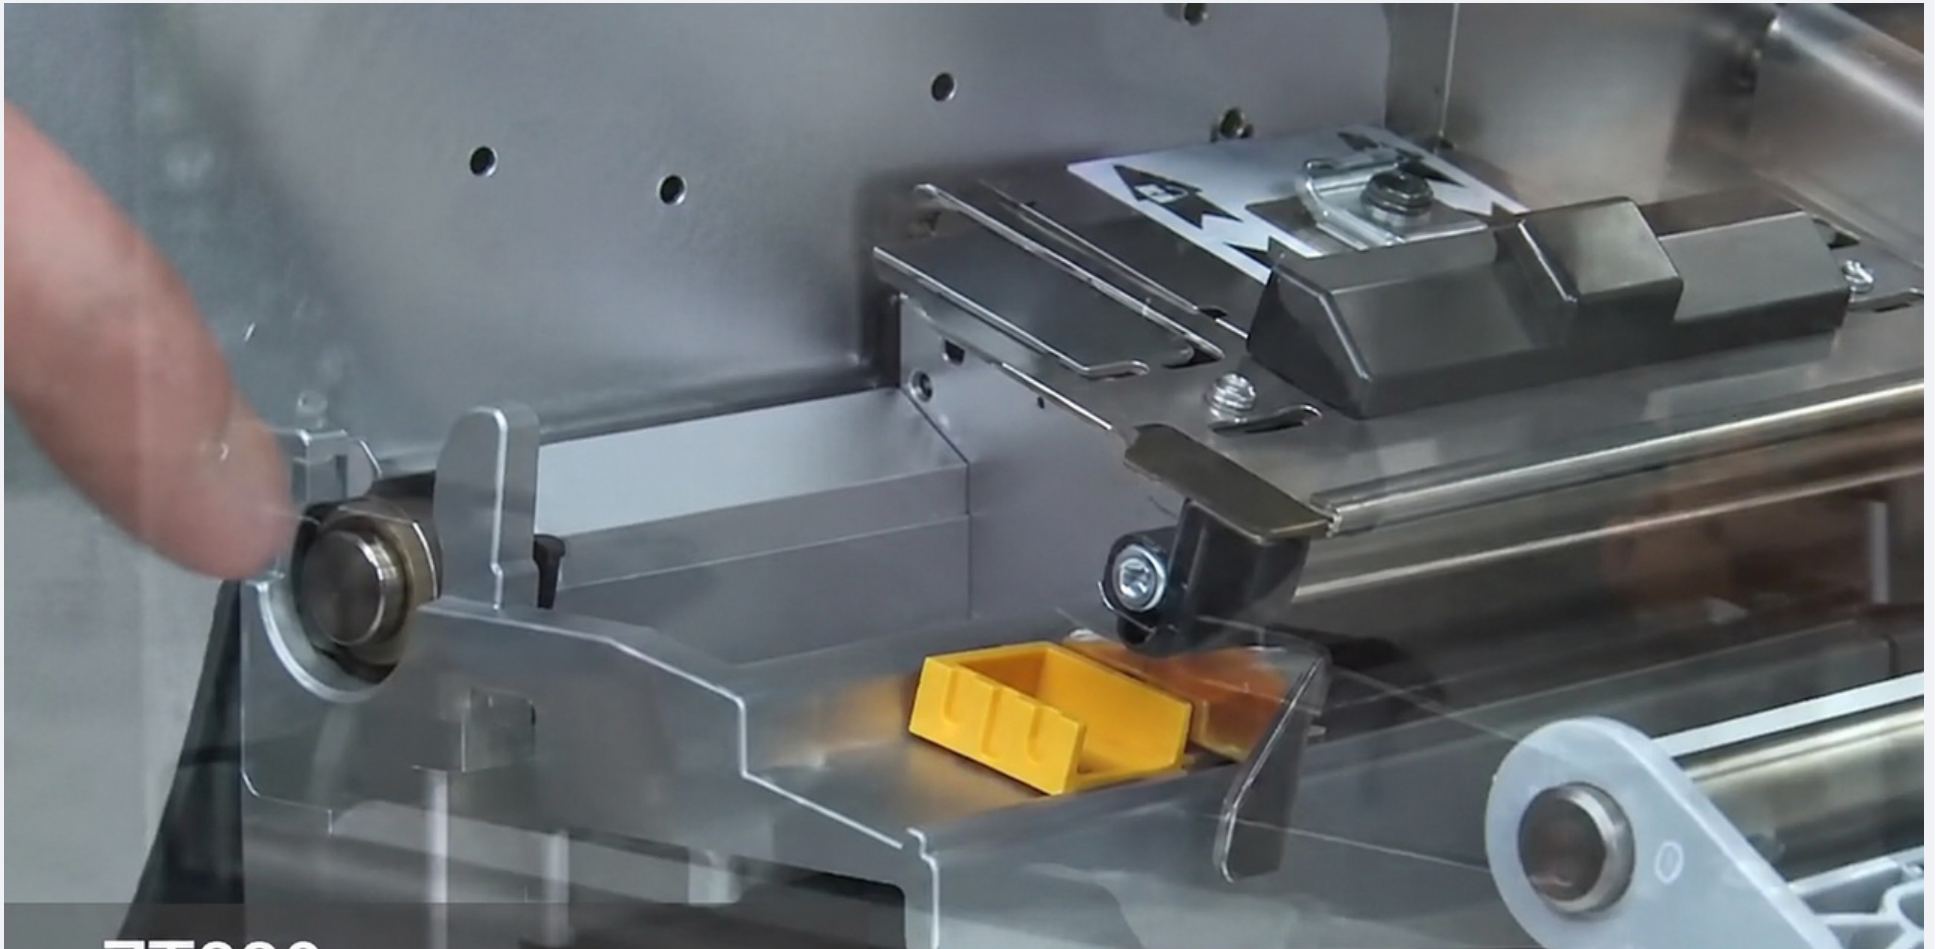

STEP 02 Rotate the yellow lever to unlock and raise the printhead.

ZT230 DIRECT-THERMAL LABEL LOADING



STEP 03 Lower the yellow media-supply guide and move it outward.

ZT230 DIRECT-THERMAL LABEL LOADING



STEP 04 Place the label roll on the media hanger and push it fully back.


ZT230 DIRECT-THERMAL LABEL LOADING



STEP 05

Return the yellow media-supply guide to the upright position and slide it inward until it lightly touches the edge of the label roll.


ZT230 DIRECT-THERMAL LABEL LOADING

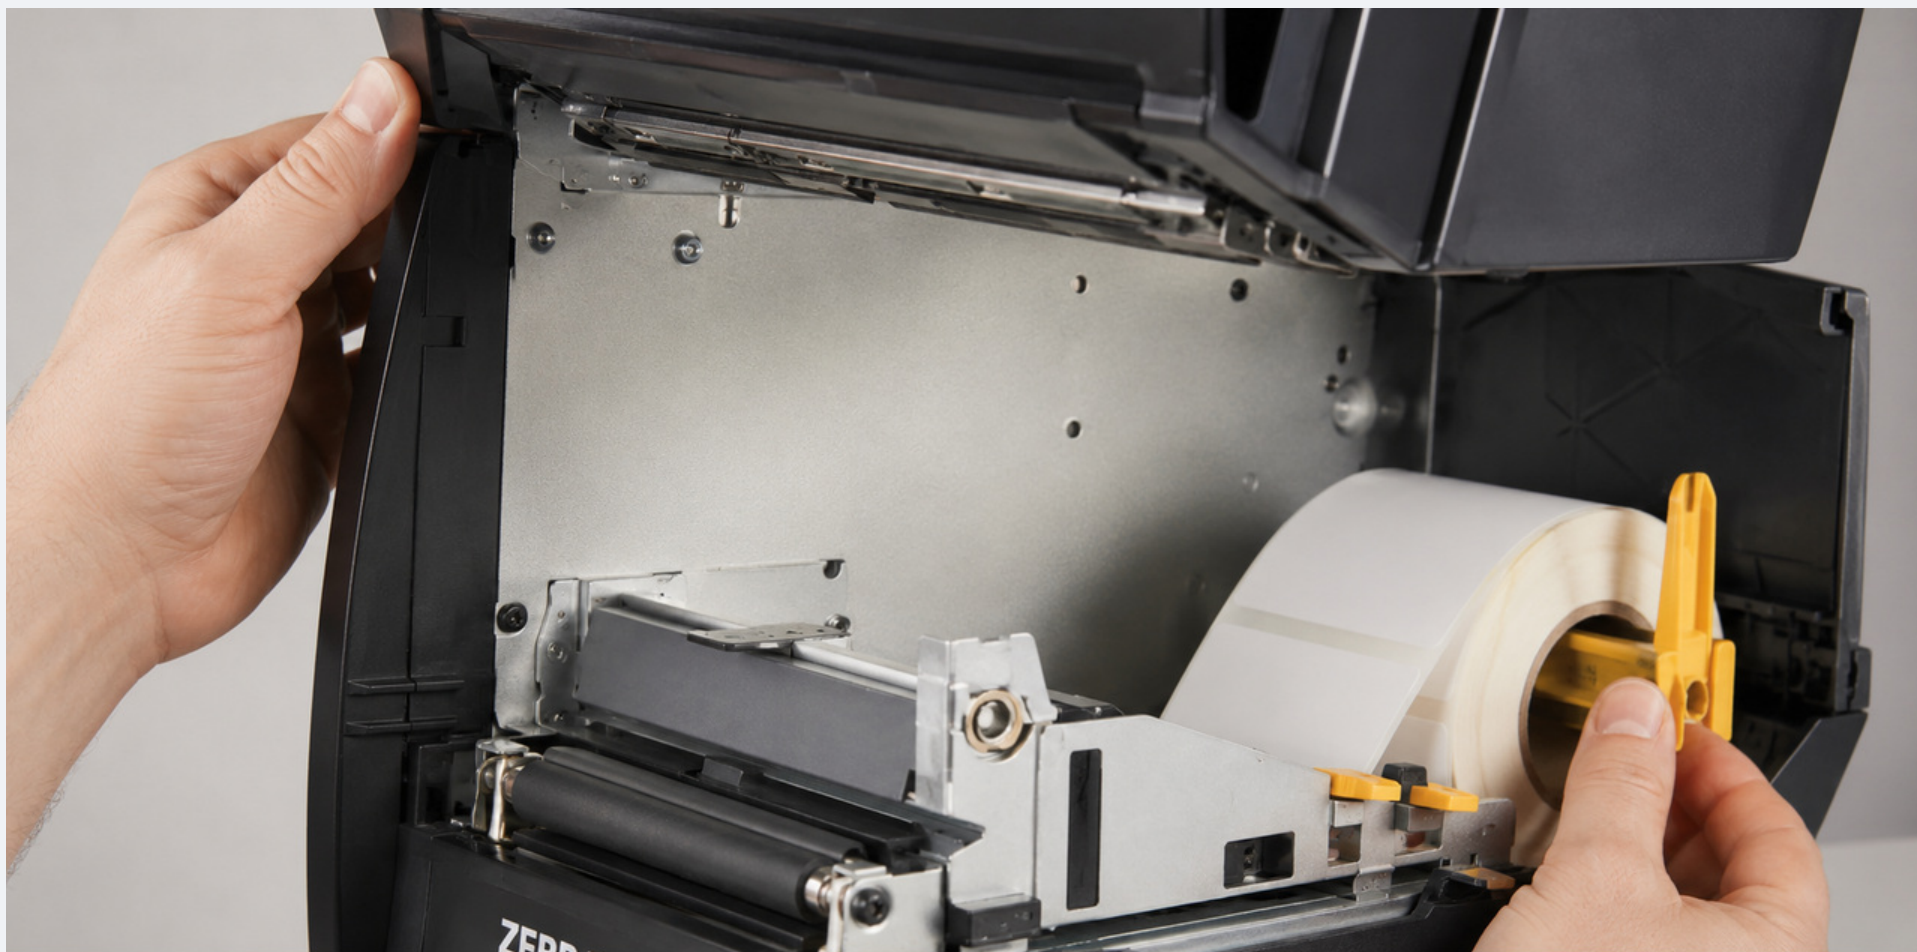

STEP 06

Route the label media under the guide and inside the sensor path.

ZT230 DIRECT-THERMAL LABEL LOADING

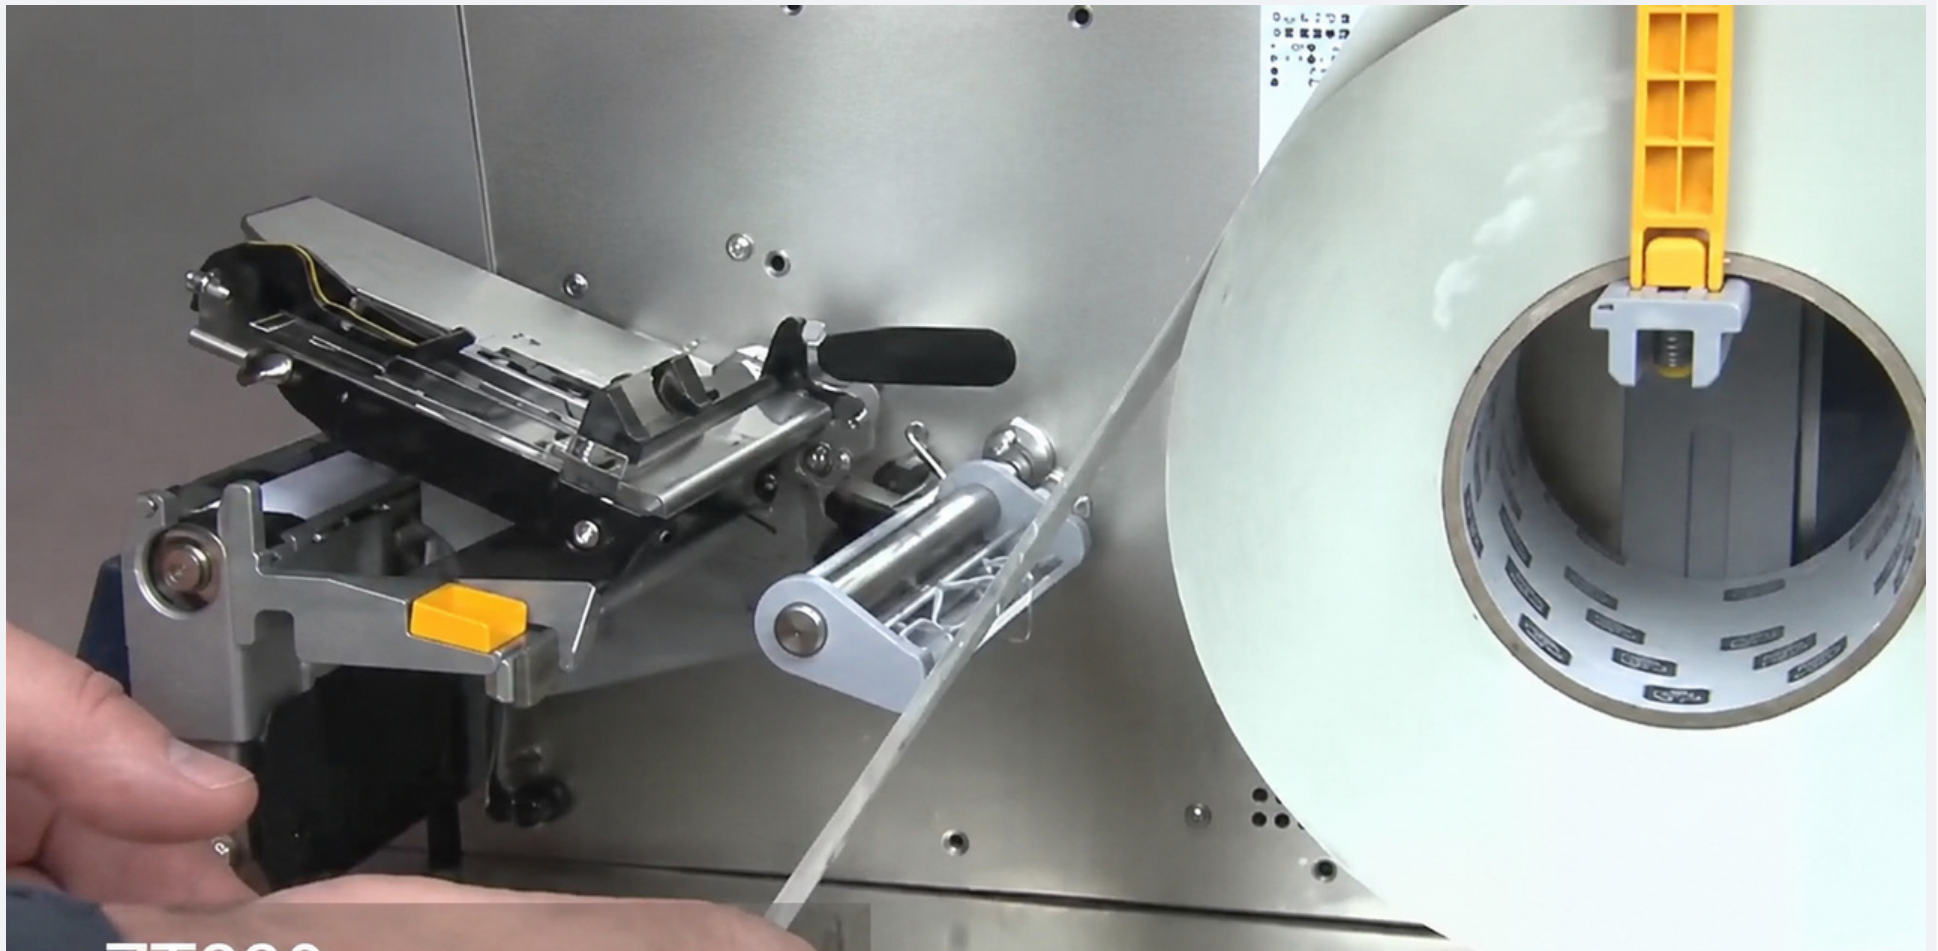

STEP 07 Pull the label media forward through the print mechanism.

ZT230 DIRECT-THERMAL LABEL LOADING



STEP 08

Slide the outer media guide inward until it lightly touches the media.



STEP 09

Rotate the yellow lever fully downward to lock the printhead assembly.



STEP 10 Lower the media door and close it completely.



STEP 11

Press PAUSE to resume operation and allow the printer to calibrate.